



- Check that the engine flange has SAE dimensions and that the flywheel size is included in the table below.
- Check the exact position of the flywheel in relation to the flange ("G" measurement).
- When ordering pump always specify the flywheel size and Rovatti code.

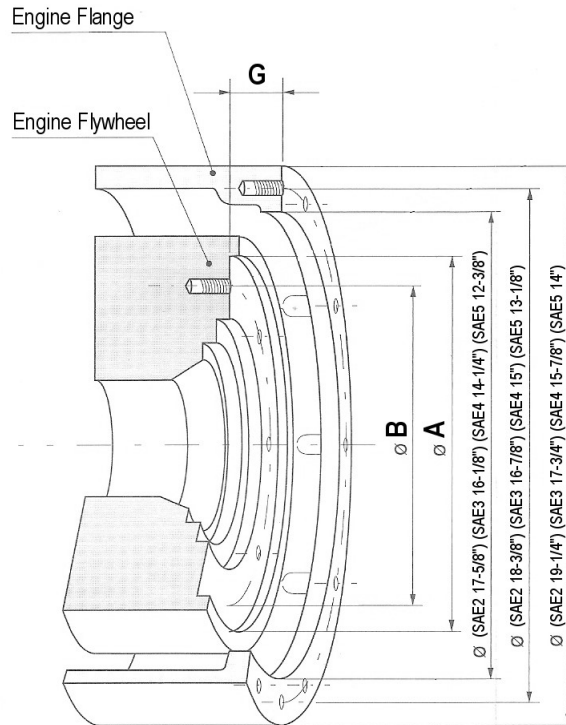

Flanged Pumps		Diesel Engines			Rovatti		
<h2>Dimensions</h2>					Use Rovatti Code below when ordering pumps.		
Flange Size	Flywheel Size	Flywheel Dimensions			Rovatti Code		
		A	B	G	F2K	F3K	F4K
SAE 2	8"	10-3/8"	9-5/8"	2-7/16"	****	88-8-42	88-8-48
	10"	12-3/8"	11-5/8"	2-1/8"	****	88-10-42	88-10-48
	11-1/2"	13-7/8"	13-1/8"	1-9/16"	****	110-11-42	110-11-48
SAE 3	8"	10-3/8"	9-5/8"	2-7/16"	88-8-32	88-8-42	88-8-48
	10"	12-3/8"	11-5/8"	2-1/8"	88-10-32	88-10-42	88-10-48
	11-1/2"	13-7/8"	13-1/8"	1-9/16"	110-11-32	110-11-42	110-11-48
SAE 4	6-1/2"	8-1/2"	7-7/8"	1-3/16"	40-6-32	40-6-42	****
	7-1/2"	9-1/2"	8-3/4"	1-3/16"	55-7-32	55-7-42	****
	8"	10-3/8"	9-5/8"	2-7/16"	88-8-32	88-8-42	****
	10"	12-3/8"	11-5/8"	2-1/8"	88-10-32	88-10-42	****
SAE 5	6-1/2"	8-1/2"	7-7/8"	1-3/16"	40-6-32	40-6-42	****
	7-1/2"	9-1/2"	8-3/4"	1-3/16"	55-7-32	55-7-42	****
	8"	10-3/8"	9-5/8"	2-7/16"	88-8-32	88-8-42	****

Reminder: Check the exact position of the flywheel in relation to the flange ("G" measurement).